



1. For 600 ohm headphone impedance, jumper IL to LA. For 150 ohm headphone impedance, jumper IL to LB.

2. The same PC Board is used in the right earcup also. In the right earcup only, point JA is jumpered to point JB in the T101 location.

3. Adjust R101 for 0.5 volts p-p at MA with normal voice audio.

4. L101 is the earphone in the left earcup; L201 is the earphone in the right earcup. All the parts except L201 are on the PC Board in the left earcup.

5. Note that during construction it is possible (at the option of the owner) to swap left and right earcup assemblies if the owner wants the boom microphone on the right earcup. Standard is with the microphone on the left earcup.

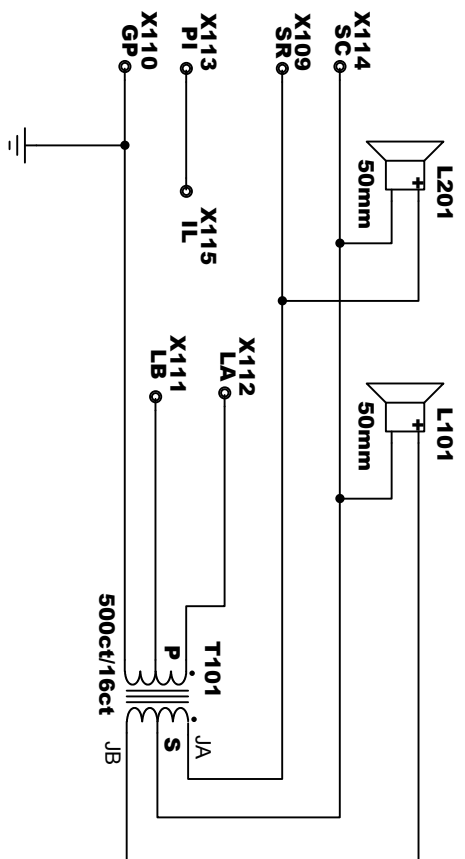

Earcup PC Board		
Rev	ID	
A	470-5802	
Date:	25 May 01	Page: 1 of 2